


GrayWolfLive Quick Start Guide

GrayWolfLive can be used directly with Wi-Fi enabled DirectSense II Probes or with GrayWolf probes connected to AdvancedSense PRO's, Laptops and Tablets. The initial setup is different depending on the configuration so make sure to use the correct SETUP section.


Wi-Fi Enabled DirectSense II Smart Probe Setup

1. Connect your DirectSense II Smart Probe to a Windows Desktop PC, Tablet or Notebook with the supplied USB-to-Lemo cable. (Note that on first connection, Windows may need to download USB drivers.)
2. Run the Configuration tool: <https://graywolfsensing.com/downloads/dsii/dsii.exe>

3. Use the CONNECT button to search for probes.

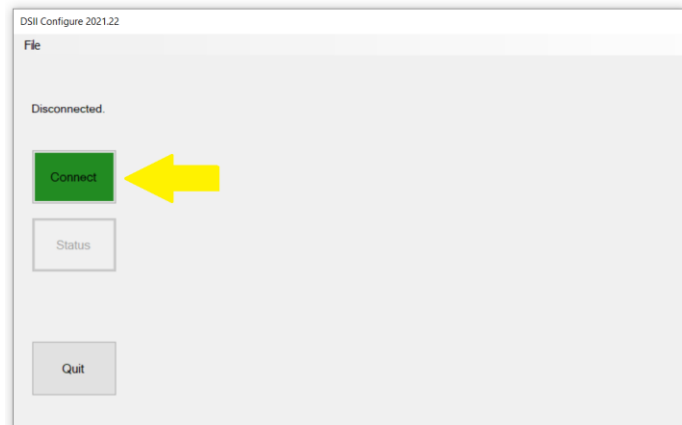


4. Once the probe is connected, use the CONFIGURE button to access the settings.

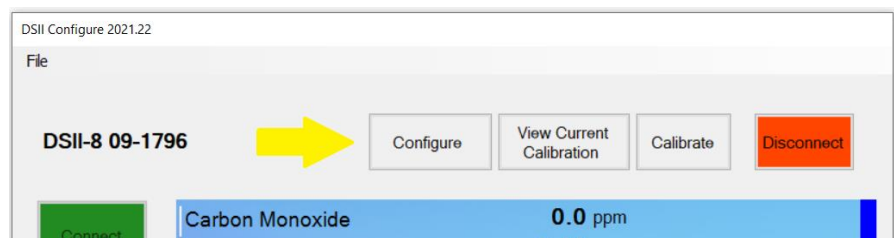


Alternatively, if you prefer to use WolfSense LAP you may connect your DSII probe and then select PROBE MENU, PROBE OPTIONS and use the DSII button.

5. Either through WolfSense LAP or the DSII Configuration Tool you will be directed to the DSII Configuration Menu.

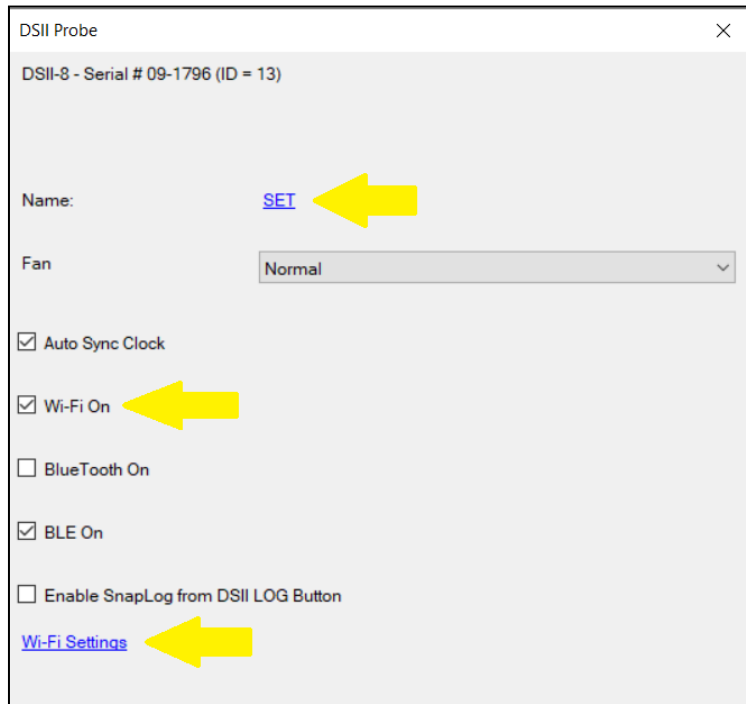

6. On the settings screens, use the link next to **NAME** to give the probe a “friendly” name. This can be changed anytime using GrayWolfLive. Make sure **Wi-Fi ON** is CHECKED. Then click on **Wi-Fi Settings**.

7. Enter your Wi-Fi network’s SSID. The SSID that your Windows computer is currently connected to will appear in the drop-down list. Enter the password and your GrayWolfLive Email Address.

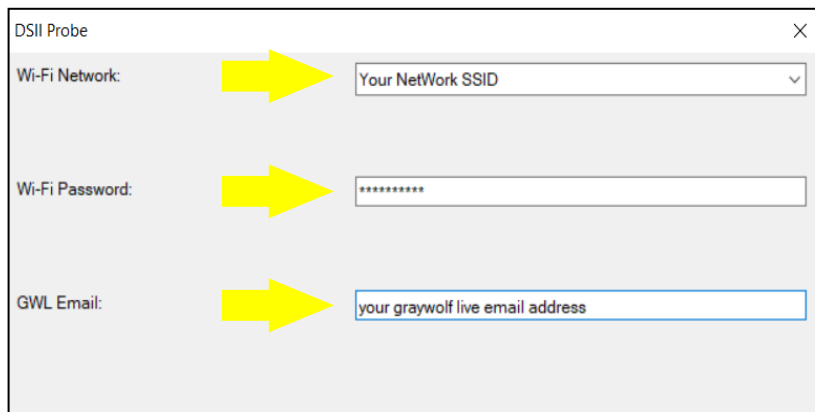

8. Press OK and the system will write the settings to the DSII Probe. Press OK again to finish the configuration. Press DISCONNECT and you will be prompted to REBOOT the probe.

You must reboot or power-cycle the probe for the new settings to take effect.



The LED on your DSII probe will mostly remain off, flashing **green** very quickly every 15 seconds to indicate Wi-Fi connection. If the probe is flashing **red**, it may indicate low battery. 9 Flashes followed by a pause indicate a Wi-Fi connection issue in which case you may need to check your settings or your Wi-Fi network.

You are now ready to use GrayWolfLive. Skip ahead to the section on **Using the GrayWolfLive Website**.

Setup for Wi-Fi Enabled AdvancedSense PROs, Tablets and Laptops

Enable GrayWolfLive and Connect to Wi-Fi Network

1. From LOG menu, select **GrayWolfLive**.
2. Check **Wi-Fi Card On**. (Note: for Laptop/Tablet this is enabled and not selectable.)
3. Check **Send Data to GrayWolfLive**. (Note: Uncheck if you do not want logged readings synchronized to GrayWolfLive.)
4. Check **Live Readings & Remote Control**. (Note: uncheck to disable this feature.)
5. Select **Configure Wi-Fi** button.

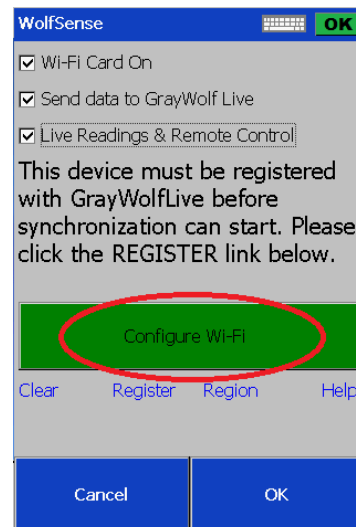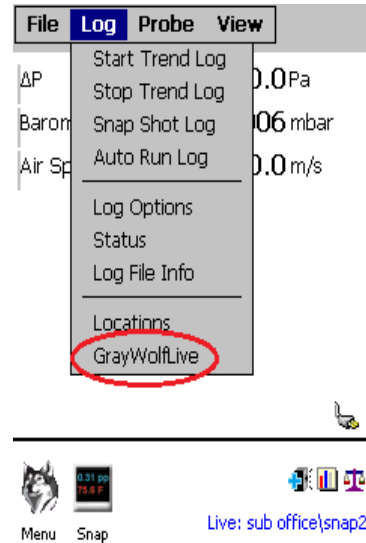

Configure Wi-Fi Settings

1. Select the Wi-Fi connection from the Access Points drop down list.
2. Enter Wi-Fi key or password.
3. Select **GO** button.

NOTE: For Tablets and Laptop PC's running WolfSense LAP, the Wi-Fi is handled through Windows 7/8/10 as per the manufacturer's instructions. You will still need to complete Steps 3 and 4.

4. When Wi-Fi connection is established, message at top will turn **green** and report signal strength.

The screenshot shows the 'Wi-Fi 1.07' configuration interface. At the top right, there is a keyboard icon and a green 'OK' button. The main text reads: 'To setup Wi-Fi connection select your Access Point and, if applicable, enter Key/Password then press Go.' Below this, there are three fields: 'Access Points' with a dropdown menu showing 'Network 215', 'Network Type' with a dropdown menu showing 'WPA', and 'Key/Password' with an empty text input field. To the right of the 'Key/Password' field is a 'GO' button. At the bottom of the main area, there are three links: 'Advanced', 'Refresh', and 'Info', followed by 'Open Internet Browser'. A blue bar at the very bottom contains the 'Exit' button.

If the network requires additional authentication or log-in, use the [Open Internet Browser](#) link at bottom of the screen.

The screenshot shows the 'Wi-Fi 1.07' configuration interface after a successful connection. At the top right, there is a keyboard icon and a green 'OK' button. The main text is green and reads: 'Connected to access point. GrayWolfLive connection OK. Signal strength Excellent.' Below this, the same three fields are present: 'Access Points' (empty dropdown), 'Network Type' (dropdown showing 'WPA'), and 'Key/Password' (empty text input field) with a 'GO' button to its right. The links 'Advanced', 'Refresh', 'Info', and 'Open Internet Browser' are still visible. A blue bar at the bottom contains the 'Exit' button.



Select your Server Region

You have been assigned to **US Central** as your database region.

Select the REGION link and then select Cloud (**US Central**) as your region. The software will restart once the new region is selected.


NOTE: Your region may have been pre-selected on your unit if you purchased it directly from GrayWolf.

Once the region is set, you will not need to change it unless directed to do so by GrayWolf Tech Support.

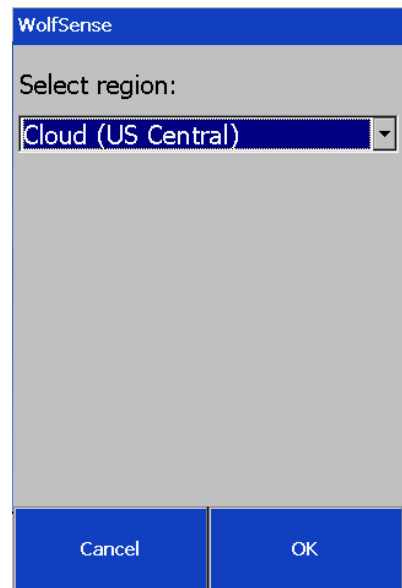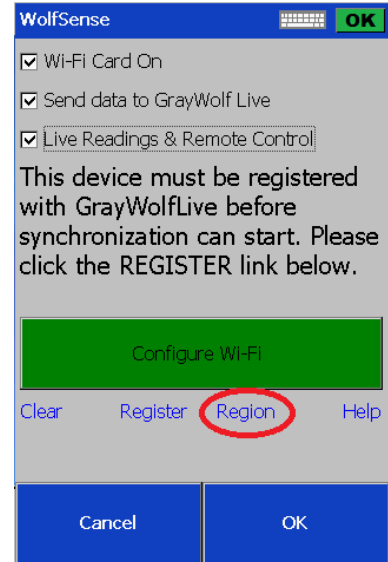


Register with GrayWolfLive

1. From the LOG menu, select GrayWolf Live to re-access the configuration screen.
2. Select **Register**.
3. Select **OK** and the registration utility will be started.

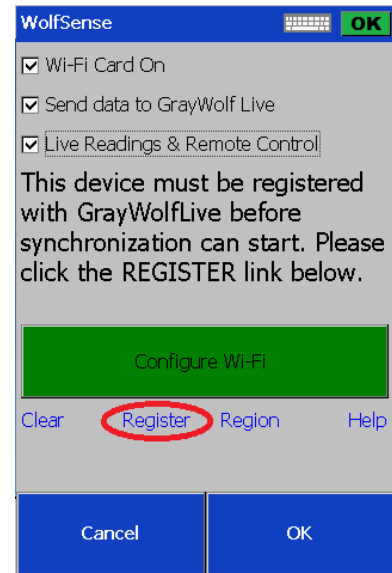

The utility may take a minute to start. If it does not appear, exit the software with FILE menu, EXIT and RESTART or use the soft-reset button and repeat the above steps.

4. Enter a device name and the email address registered to GrayWolfLive. (*Note: the device name may be modified using the GrayWolfLive website later.*)
5. Press the **Register** button.
On successful registration, a dialog box is displayed.

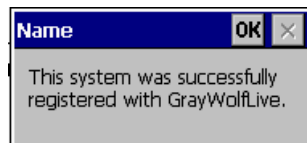

NOTES:

You only have to perform registration once per device. If you need to associate your device with another GrayWolfLive account, you may re-register. If you have multiples of the same device to register, you might consider including the device serial number in the Device Name field to help keep the registrations organized.

When viewing live readings on your device, the Wi-Fi  icon will appear on the screen when a network is detected and files or live readings are being synchronized.

The  Wi-Fi error icon will appear when:


- a) There is no network detected or
- b) A connection to the GrayWolfLive website cannot be established. When no icon is shown, the GrayWolfLive system is disabled, or the Wi-Fi card is not powered on.

Registering other GrayWolf Devices on GrayWolfLive

If you are registering a Particle Counter or other GrayWolf device that is not AdvancedSense/Tablet/Laptop based and is not DirectSense II Smart Probe based, you should have received additional instructions. If not, please contact Technical Support.

Using the GrayWolf Live Website:


Log on using your email address at <https://us.GrayWolfLive.com> and the initial password provided by GrayWolf (which can be changed later).

The *Getting Started* page and Tip Icons  will give you helpful information about using the site. The menus at the top allow you to look at **LOGGED DATA**, **LIVE READINGS**, control your **DEVICE** (Start/Stop Logs).

On Mobile Devices, Phones and Tablets, the GrayWolfLive website will reformat itself for best appearance and functionality. Some screens and controls will appear different, but operation remains the same.

For technical assistance, use our form at: <https://us.graywolflive.com/About.aspx> (or access the link at **About/Contact** from the Log-in screen)

Email support directly at graywolflivesupport@graywolfsensing.com

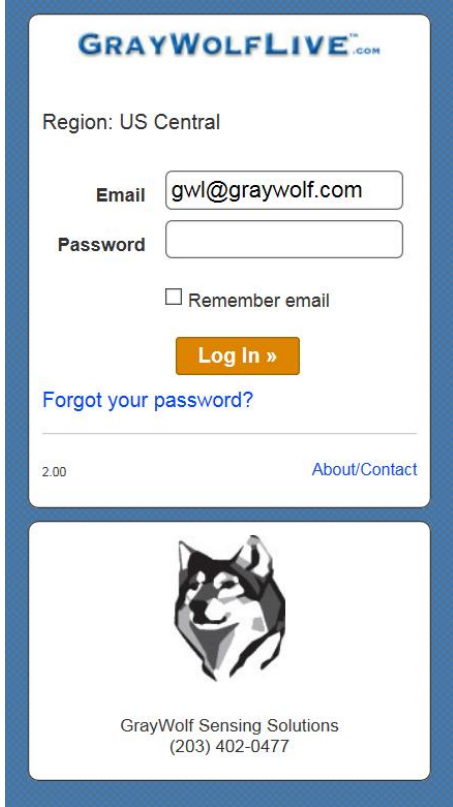

GRAYWOLFLIVE™.COM

Region: US Central

Email:


Password:

Remember email


[Log In »](#)

[Forgot your password?](#)

2.00 [About/Contact](#)




GrayWolf Sensing Solutions
(203) 402-0477


 for more information throughout the site.' Below this is a section titled 'View Live Readings' with the text: 'To view current readings from your connected devices in real time. Use the LIVE READINGS Menu above. [Take Me There Now »](#).'" data-bbox="112 558 875 732"/>

GRAYWOLFLIVE™.COM
GrayWolf Sensing Solutions


LOGGED DATA LIVE READINGS DEVICES MY ACCOUNT LOG OUT

Locations

Organize by
 

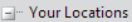

Getting Started

Hover over the Tip icons  for more information throughout the site.


View Live Readings

To view current readings from your connected devices in real time. Use the LIVE READINGS Menu above. [Take Me There Now »](#).


Transferring and Viewing Files using WolfSense PC

From WolfSense PC (version 2020.XX or higher), you can select to Transfer Files stored on GrayWolfLive.


To Download the latest version of WolfSense PC, go to: <https://graywolfsensing.com/wolfsense-pc-and-arg-desktop-reporting-software/>

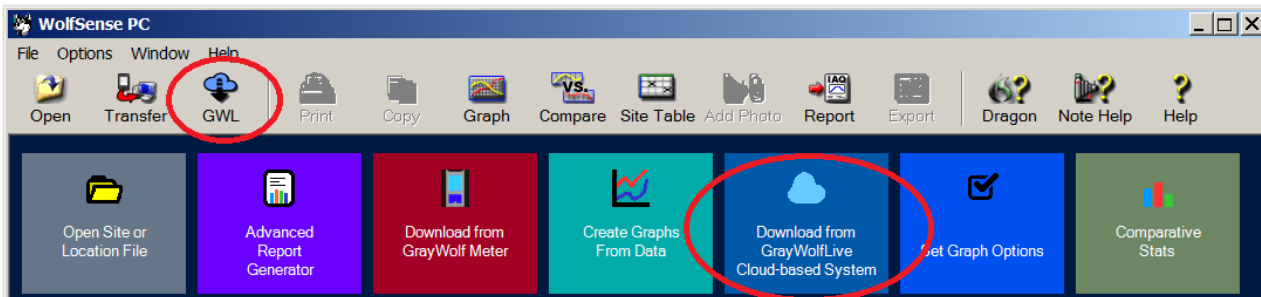

1. Log in to the GrayWolfLive system using your email and password. You have the option to remain logged in at your computer. **You must set the REGION to US Central.**

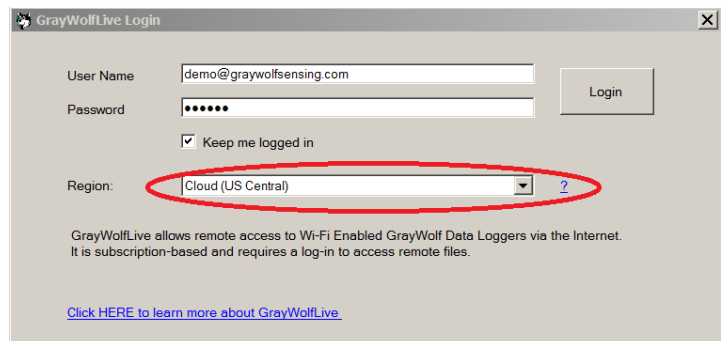

2. Select a file and click the **VIEW** button. Alternatively, you can **SAVE** the file to a local drive on your computer.

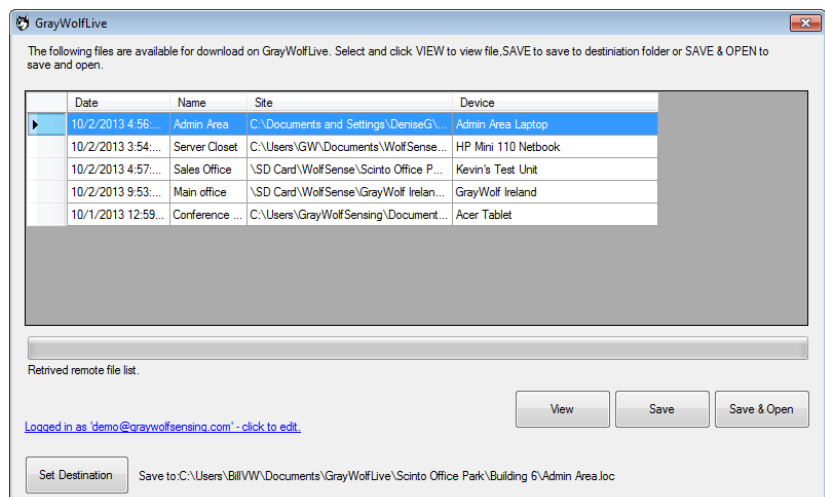

Close the location in WolfSense PC and click the VIEW button to refresh the data.

Note: Location Files that have been Archived on GrayWolfLive will not appear.